



# WIRING INSTRUCTIONS

## SMM Steel Hardtop V4


### Nissan Navara D40 2005-2015




FUNCTION	HARDTOP WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Sky Blue (Plug A)
Rear Demister	Yellow/Red	Green (Plug C)
Central Locking(Lock)	Blue	Blue (Plug B)
Central Locking(Unlock)	Green	White (Plug B)
Earth	Black	Car body
Brake Light	Red	Green/Yellow (Plug D)
Earth	Black	Black/ White (Plug D)

Plugs A, B, C are located at the front of the vehicle on the driver side behind the kick panel.

Plug D is located behind the tail light on the passenger's side.

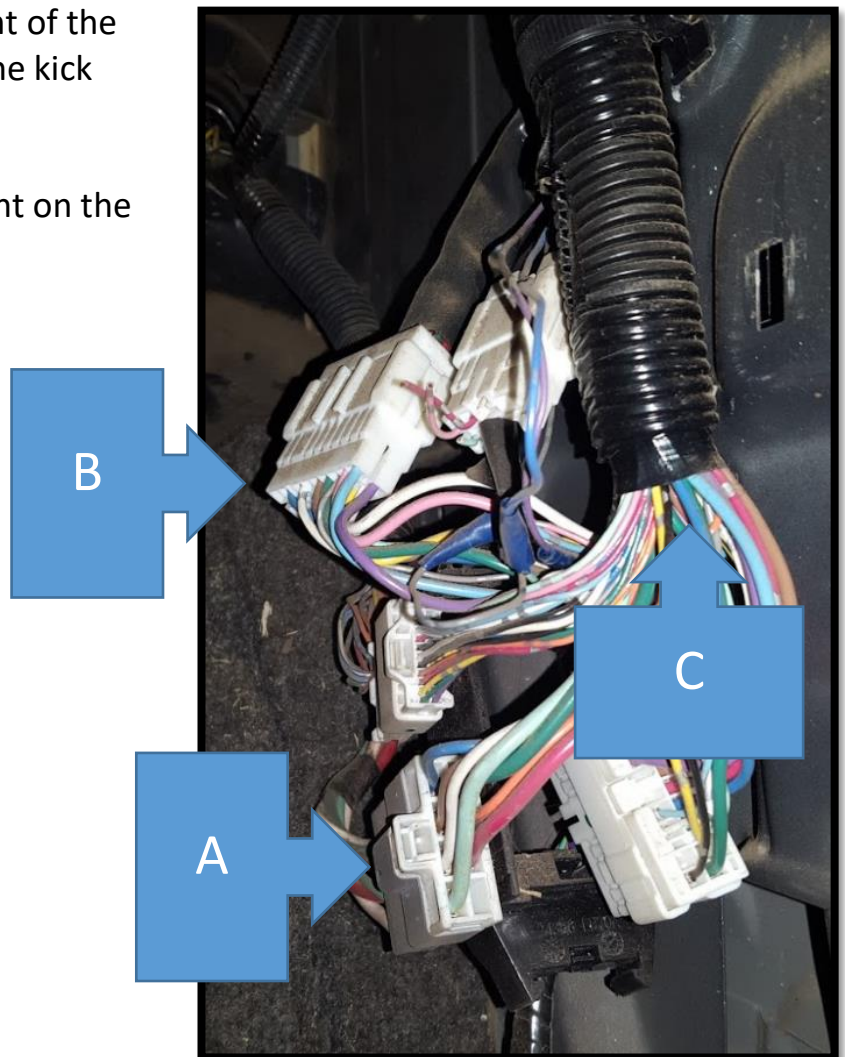


## Plug A

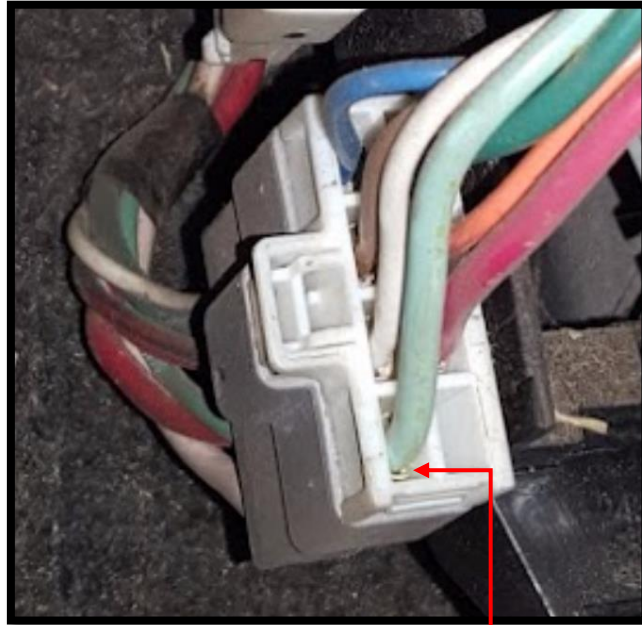

Red to Sky Blue (Constant Power-Dome light)

Black to Car Body (Earth)


## Plug B

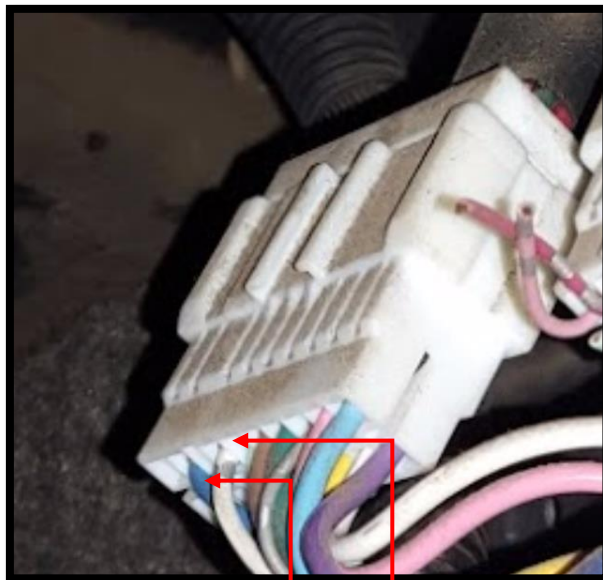

Blue to Blue (Central Locking- Lock)


Green to White (Central Locking- Unlock)

## Plug C

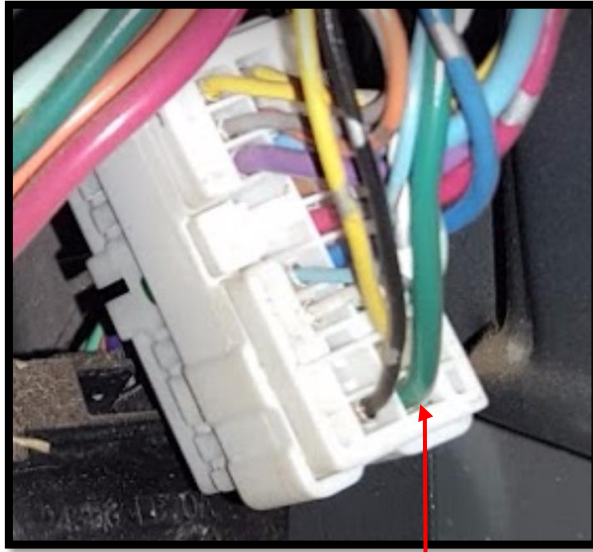

Yellow/Red to Green (Rear Demister)

## Plug D

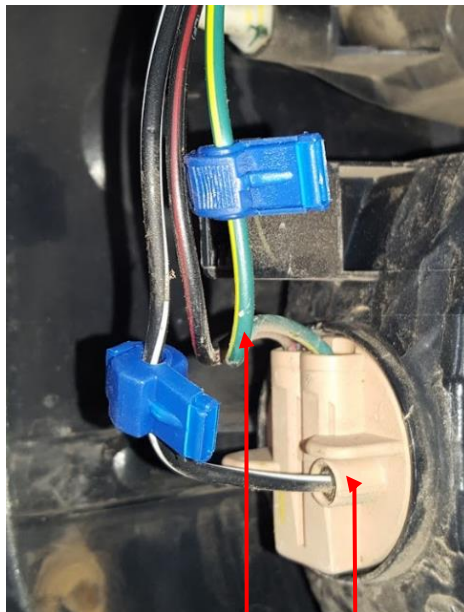

Red to Green/Yellow (Brake Light)

Black (Earth) to White/Black



## Running the loom.

You will find an opening with a grommet sealing it under the passenger seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



## **PLEASE NOTE**

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the hardtop to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.