


**CAUTION**

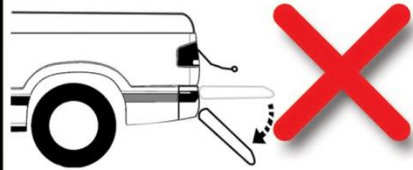

Do not take off  
tailgate cable  
and drop down  
the tailgate

**Note :**


Apply WD40 or grease to the moving  
parts regularly for good performance  
of the product.

Patent Pending Worldwide






**FITTING INSTRUCTION**


**NISSAN NP300**

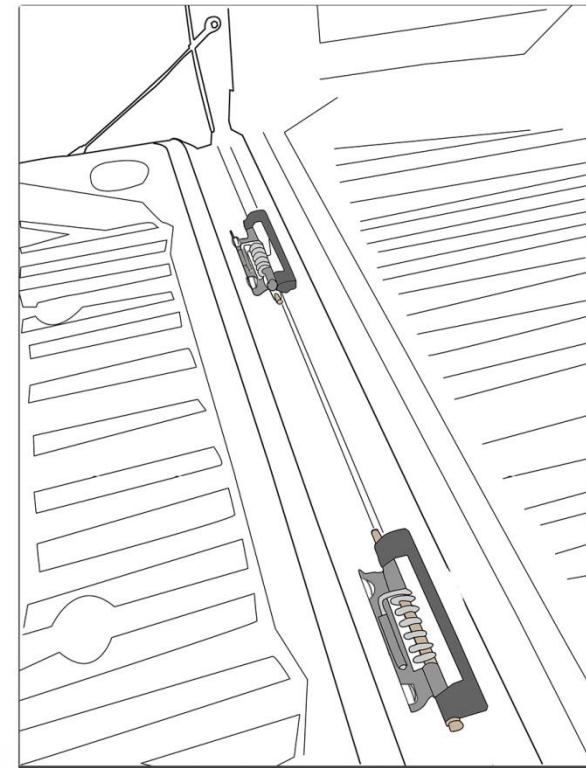


Patent Pending Worldwide

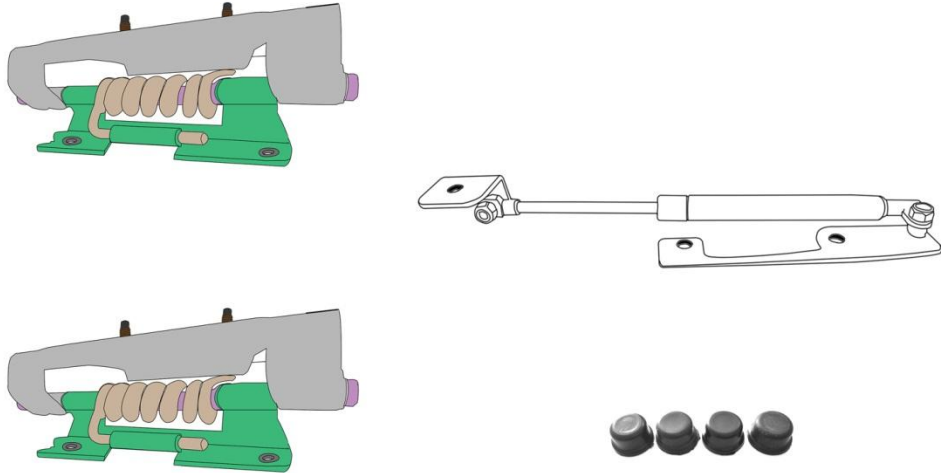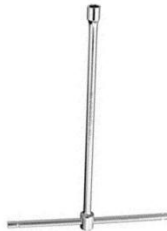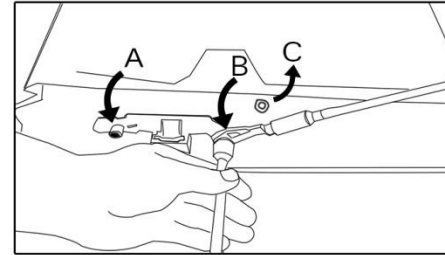Part listToolingNo.13No.12No.122. Attach barrel end to tailgate


un-bolt bolt A and B  
take out flat washer C

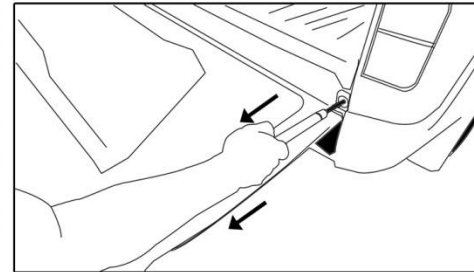

pull the damper

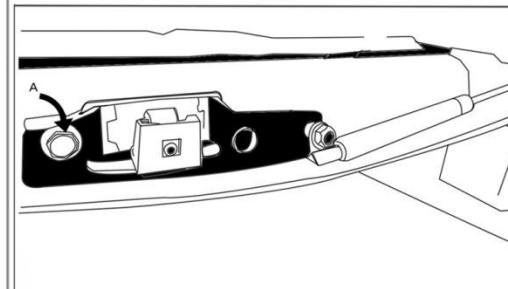


place the bracket of the damper  
and tighten bolt A back

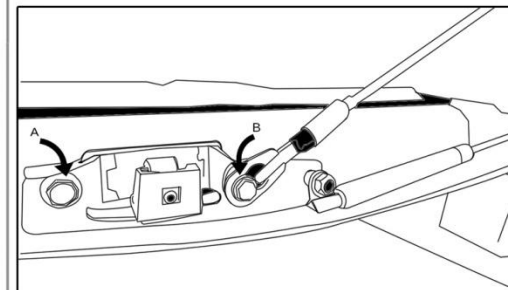


put sling back in place  
and tighten bolt B


## Attach Damper

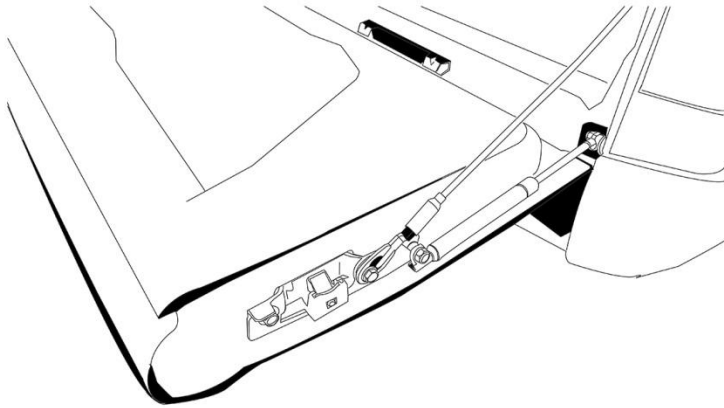



### 1. Attach rod end to the trunk

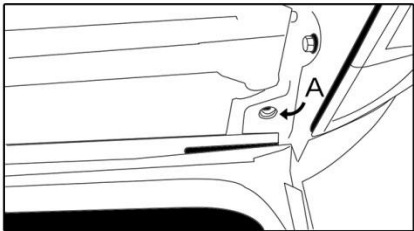


un-bolt bolt A

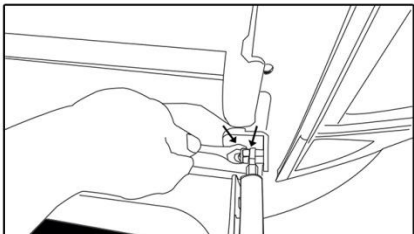


place rod end of damper  
and tighten back bolt A

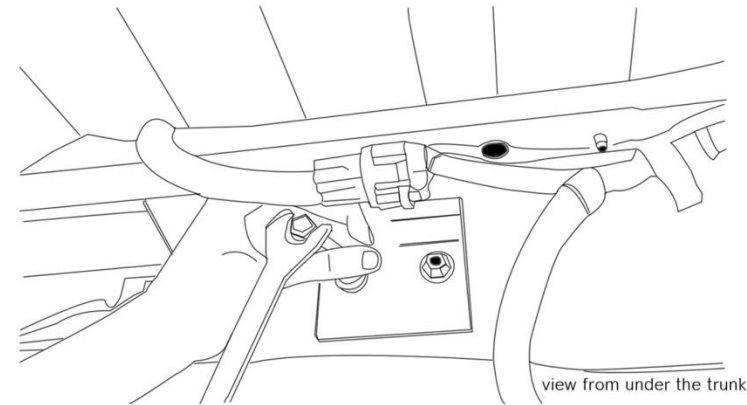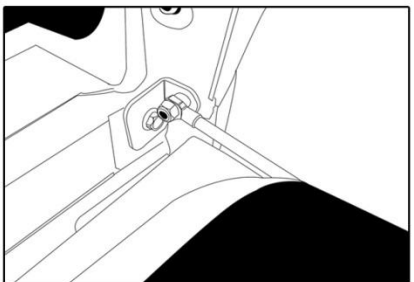


1. take out the original tailgate bracket from the trunk.

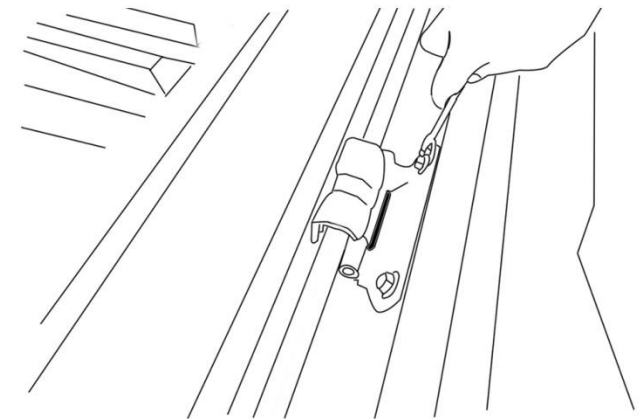


2. take off the original bracket from tailgate.

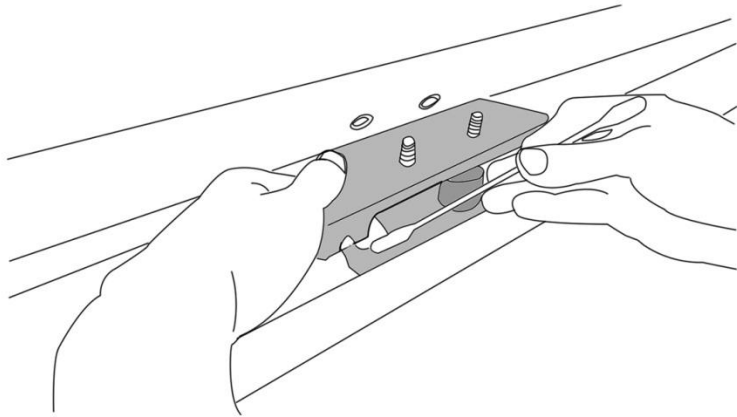

3.install ProLift bracket to the tailgate to replace the original bracket using original bolts


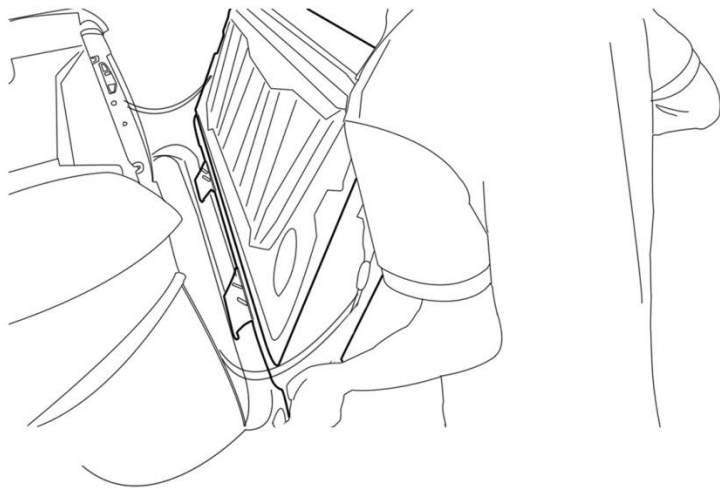


4.put tailgate back to the trunk

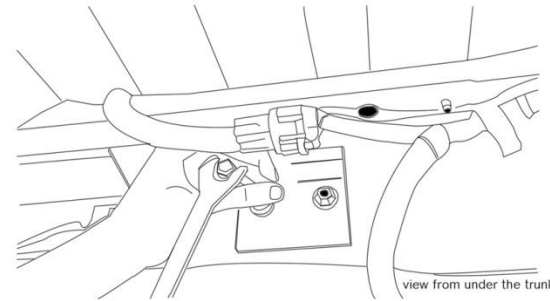

5.attache the bracket to the trunk using original bracket and nuts.

6.open the tailgate and take out the stopper rubber.

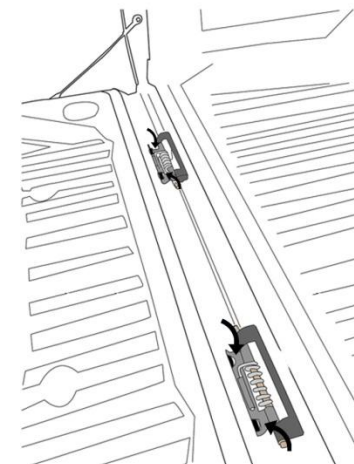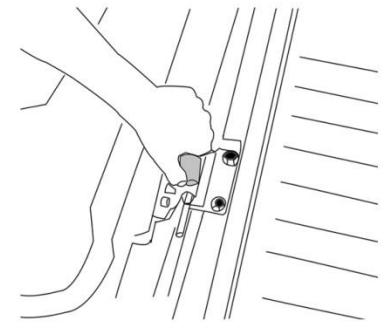

7.put plastic bolt head cover.